



COLUMBIA RESIDENTIAL

600 West 125th Street

GRADUATE STUDENT APPLIANCES

GRADUATE STUDENT APPLIANCES

TAG	APPLIANCE	MFG	MODEL#
AP 101	FRIDGE 24" ADA	WHIRLPOOL	WRT312CZJZ
AP 102	FRIDGE 24"	BLOMBERG	BRFB1312SS
AP 103	2 BURNER ELECTRIC COOKTOP. 12"	SUMMIT	CR2B15T1B
AP 104	4 BURNER ELECTRIC COOKTOP. 24"	SUMMIT	CR4B23T5B
AP 105	MICROWAVE 30" OTR	WHIRLPOOL	WML55011HS
AP 106	MICROWAVE 24"	FRIGIDAIRE	FGMO226NUF
	MICROWAVE TRIM KIT	FRIGIDAIRE	MWTK30FGUF
AP 107	RANGE HOOD. 21"	FABER	INSM21GR240

APPLIANCES PACKAGES

A	B	C	D
AP 101	AP 101	AP 102	AP 101
AP 103	AP 103	AP 104	AP 104
AP 105	AP 106	AP 105	AP 106
	AP107		AP 107

APPLIANCES PACKAGES PER FLOOR


	A	B	C	D	E	F	G	H	I	J	K	L
L3	D	A	A	A	B	A	C	A	A	A	A	D
L4	D	A	A	A	B	A	D	A	A	A	A	C
L5	C	A	A	A	B	A	D	A	A	A	A	C
L7	C	A	A	B	A	C	A	A				
L8	C	A	A	A	A	D	A	A				
L9	C	A	A	B	A	C	A	A				
L10	C	A	A	A	A	D	A	A				
L11	C	A	A	B	A	C	A	A				
L12	C	A	A	A	A	D	A	A				
L13	C	A	A	B	A	C	A	A				
L14	C	A	A	A	A	D	A	A				
L15	C	A	A	B	A	C	A	A				

AP 101 REFRIGERATOR WHIRLPOOL WRT312CZJZ

Temperature Control

Temperature Control For your convenience, the temperature control is preset at the factory. When you first install your refrigerator, make sure the control is still pre-set as shown.

NOTE: Neither compartment will cool when the control is set to OFF.

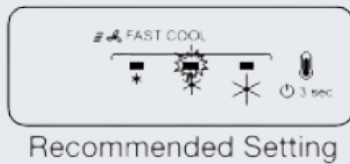

Adjusting the Temperature Control

If you need to adjust the temperature on either the refrigerator or freezer compartment, use the settings listed in the chart below as a guide.

NOTE: Except when starting the refrigerator, do not adjust the control more than one setting at a time. Wait 24 hours between adjustments for the temperature to stabilize.

- Press the Temp button to toggle among the third LED lights which indicate the temperature setting. Reading from left to right, the LED in the first position is the least cold. The LEDs indicate increasingly colder settings as you continue to the right until all third LEDs are illuminated.

Airflow Control

The Airflow control is located on the back wall of the freezer. It regulates the amount of air flowing between the freezer and the refrigerator compartments. When you plug in the refrigerator for the first time, turn the Airflow control to the Recommended setting.

Adjust the Airflow Control


If you want to temporarily increase the cold airflow to a specific compartment, adjust the control.

- IMPORTANT:** Once the performance is achieved, return the Airflow control to the Recommended setting to keep the refrigerator operating at optimum efficiency.

Refrigerator Care

Cleaning

Both the refrigerator and freezer sections defrost automatically. However, clean both sections about once a month to avoid buildup of odors. Wipe up spills immediately.

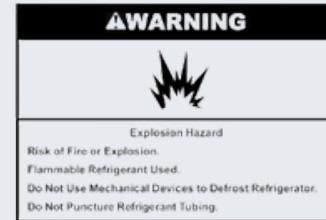

- IMPORTANT:** Because air circulates between both sections, any odors formed in one section will transfer to the other. You must thoroughly clean both sections to eliminate odors. To avoid odor transfer and drying out of food, wrap or cover foods tightly.

To Clean Your Refrigerator


NOTE: Do not use abrasive or harsh cleaners such as window sprays, scouring cleansers, flammable fluids, cleaning waxes, concentrated detergents, bleaches or cleansers containing petroleum products on plastic parts, interior and door liners or gaskets. Do not use paper towels, scouring pads, or other harsh cleaning tools.

- Unplug the refrigerator or disconnect power.
- Hand wash, rinse, and dry removable parts and interior surfaces thoroughly. Use a clean sponge or soft cloth and a mild detergent in warm water.
- Wash painted metal exteriors with a clean sponge or soft cloth and a mild detergent in warm water. Dry thoroughly with a soft cloth.
- Plug in the refrigerator or reconnect power.

AP 102 REFRIGERATOR BLOMBERG BRFB1312SS

Maintenance & Cleaning

The service life of the product is increased if it is regularly cleaned.

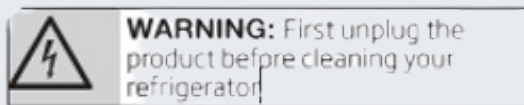

- Never use any sharp and abrasive tools, soap, household cleaners, detergent and wax polish for cleaning.
- Dissolve one teaspoon of carbonate in half liter of water. Soak a cloth with the solution and wrung it thoroughly. Wipe the interior of the appliance with this cloth and the dry thoroughly.
- Make sure that no water enters the lamp housing and other electrical items.
- Clean the door with a damp cloth. To remove door and body shelves, remove all of its contents. Remove door shelves by moving them upwards. After cleaning, slide them from top to bottom to install.
- Never use cleaning agents or water that contain chlorine to clean the outer surfaces and chromium-coated parts of the product. Chlorine causes corrosion on such metal surfaces.
- Do not use sharp, abrasive tools, soap, household cleaning agents, detergents, kerosene, fuel oil, varnish etc. to prevent removal and deformation of the prints on the plastic part. Use lukewarm water and a soft cloth for cleaning and then wipe it dry.

Avoiding Bad Odors

Materials that may cause odor are not used in the production of our appliances. However, inappropriate food-preserving conditions and not cleaning the inner surface of the appliance as required can bring forth the problem of odor. Therefore, clean the refrigerator with carbonate dissolved in water every 15 days.

- Keep the food in closed containers. Microorganisms spreading out from uncovered containers can cause unpleasant odors.
- Never keep the food that has expired best before dates and spoiled in the refrigerator.

Protecting the Plastic Surfaces

Clean with arm water immediately as the oil may cause damage on the surface when it is poured on plastic surfaces.

Door Glasses

Remove the protective foil on the glasses.

There is a coating on the surface of the glasses. This coating minimizes the stain build-up and helps to remove the possible stains and dirt easily. Glasses that are not protected with such a coating may be subject to persistent binding of air or water based organic or inorganic dirt such as limescale, mineral salts, unburned hydrocarbons, metal oxides and silicones that can easily and quickly cause stains or material damage. Keeping the glass clean becomes too difficult despite regular cleaning. Consequently, the appearance and the transparency of the glass deteriorate. Harsh and corrosive cleaning methods and compounds will intensify these defects and speed up the deterioration process.

Water-based cleaning products that are not alkaline and corrosive must be used for regular cleaning purposes.

Non-alkaline and non-corrosive materials must be used for cleaning so that the service life of this coating lasts for a long time.

These glasses are tempered to increase their durability against impacts and breaking.

A safety film is also applied to their rear surfaces as an extra safety measure to prevent them from causing damage to their surroundings in case of a breakage.

AP 103 AND 104 COOKTOP: SUMMIT CR2B15T1B, CR4B23T5B

Safety During Use

1. This appliance may only be used for normal cooking and frying in the kitchen.
2. Do not use the appliance to heat the room.
3. Take care when plugging in electric appliances near the cooktop. Connection leads must not come into contact with the hot surface.
4. Overheated fats and oils catch fire quickly. Be especially careful when cooking foods in fat or oil.
5. Switch off the cooking zones after use.
6. Always keep the control panel clean and dry.
7. Never place combustible items on the cooktop.
8. You must not keep any combustible items such as aerosol cans in a drawer located under the cooktop. Likewise, do not keep items made of plastic with a low melting point in a drawer below the cooktop.
9. To eliminate the risk of burns from reaching over heated surface units, cabinet storage space located above surface units should be avoided. If cabinet storage is necessary, the risk can be reduced by installing a range hood that projects horizontally a minimum of 5" beyond the bottom of the cabinets.
10. The service cables from electrical appliances must not touch the hot plates. This could cause damage to the cooktop and cable insulation.
11. This appliance is not intended for use by young children or infirm persons unless they are adequately supervised by a responsible person to ensure that they are using the appliance safely. *Young children should be supervised to ensure that they do not play with the appliance.*
12. Accessible parts become hot during use. Young children should be kept away.
13. The cooking zones will become hot when you cook. Therefore, always keep small children away from the appliance. Although the cooktop is equipped with a control lock, surfaces may still be hot.

Safety when cleaning

1. Always switch off the appliance before cleaning.
2. For safety reasons do not clean the appliance with a steam jet or high pressure cleaner.
3. Clean the cooktop in accordance with the Care and Cleaning instructions in this manual.
4. Do not use harsh cleansers or abrasive cleaning pads to clean the ceramic glass surface since they can scratch the surface, which may result in shattering of the glass.

How to avoid damaging the appliance

1. Do not use the cooking area as a worktop or storage space.
2. Please be careful of the edges when moving pots and pans around.
3. Do not leave the cooking zones on with empty pans, or with no pots or pans on them.
4. Ceramic glass is very tough and impervious to sharp temperature changes, but is not unbreakable. It can be damaged if particularly hard or sharp objects fall on it.
5. Be very cautious if using pots made of cast iron, or other pots with rough edges or burrs. Moving these can cause scratches on glass.
6. If sugar or a mixture containing sugar falls onto a hot cooking zone and melts, remove immediately, while still hot. If left to cool down, it may damage the surface when removed.
7. Keep objects or materials liable to melt away from the ceramic glass surface, for example, plastic utensils, aluminum foil, or cooking wraps. If any other materials or foodstuffs have melted on the ceramic glass surface, these should also be cleaned away immediately.

CARE AND CLEANING

Cleaning The Cooktop

Only use an approved ceramic cooktop cleaner on the glass cooktop. Other creams may not be as effective or they might damage the surface with scratches or permanent staining. To maintain and protect the surface of your glass cooktop, follow these steps:

1. Before using the cooktop for the first time, clean it with a ceramic cooktop cleaner. This helps protect the top and makes cleanup easier.
2. Daily use of the ceramic cooktop cleaner will help keep the cooktop looking new.
3. Shake the cleaning cream well. Apply a few drops of cleaner directly to the cooktop.
4. Use a paper towel to clean the entire cooktop surface.
5. Rinse with clear water and use a dry cloth or paper towel to remove all cleaning residue.

NOTE: It is very important that you DO NOT heat the cooktop until it has been cleaned thoroughly.

DO NOT use scrub pads or abrasive cleaning pads. They may damage your glass cooktop surface. For your safety, please wear an oven mitt potholder while cleaning the hot cooking surface.

105 MICROWAVE 30" WHIRLPOOL WML5501HS

Microwave Oven Care

General Cleaning

IMPORTANT: Before cleaning, make sure all controls are OFF and the microwave oven is cool. Always follow label instructions on cleaning products.

To avoid damage to the microwave oven caused by arcing due to soil buildup, keep cavity, microwave inlet cover, cooking rack supports, and area where the door touches the frame clean.

Clean with mild soap, water, and a soft cloth or sponge or as indicated below:

- Grease filter: mild soap and water or dishwasher
- Door and exterior: mild soap and water, or glass cleaner applied to paper towel
- Control panel: sponge or soft cloth and water
- Stainless steel (on some models): mild soap and water, then rinse with clean water and dry with soft cloth, or use stainless steel cleaner
- Turntable: mild soap and water or dishwasher.

Installing/Replacing Filters and Light Bulbs


Grease Filters: Grease filters are underside of microwave oven. The grease filters should be removed and cleaned at least once a month. See the "Settings" section to reset filter status.

NOTE: For recirculation: Do not operate the microwave oven without the filters in place.

For wall and roof ventilation: To ensure good performance of airflow, remove the charcoal filter from the bottom plate before operating the microwave oven.

Refer the following steps for replacing grease filter:

1. To remove the grease filter, push the finger grip back and then pull down from the bottom plate.

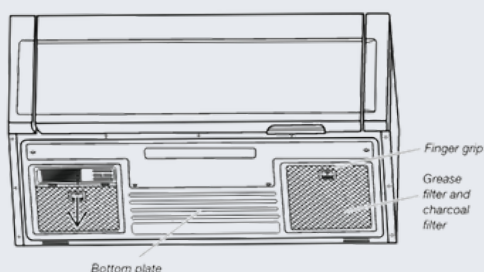

2. Clean the grease filter monthly, or replace with a new grease filter if necessary.

3. Put the grease filter back to the bottom plate.

Charcoal Filter: Charcoal filters are underside of microwave oven. The charcoal filter cannot be cleaned and should be replaced about every 6 months. See the "Settings" section to reset filter status.

NOTE: For recirculation: Do not operate the microwave oven without the filters in place.

106 MICROWAVE 24" FRIGIDAIRE GMTK3068AF

Microwave Oven Care

Cleaning Suggestions

For best performance and for safety reasons, keep the oven clean inside and outside. Take special care to keep the inner door panel and oven from frame free of food and grease build-up.

Never use rough scouring powder or pads on the microwave. Wipe the microwave oven inside and out with a soft cloth and warm (not hot) mild detergent solution. Then rinse and wipe completely dry.

Wipe spatters immediately with a wet paper towel, especially after cooking greasy foods like chicken or bacon.

Follow these instructions to clean and care for your microwave oven:

- Keep the inside (cavity) of the oven clean. Food particles and spilled liquids can stick to the oven walls, causing the oven to work less efficiently.
- Wipe up spills immediately. Use a damp, clean cloth and mild detergent. DO NOT use harsh detergents or abrasive cleaners.
- To help loosen baked-on food particles or liquids, heat 2 cups of water (add the juice of 1 lemon if you desire to keep the oven fresh smelling) in a 4 cup measuring glass at High power for 5 minutes or until boiling. Let stand in oven cavity for 1 or 2 minutes.
- Remove the glass turntable tray from the oven when cleaning the oven cavity or tray. To prevent the glass turntable from breaking, handle with care and do not put it in water immediately after cooking. Wash the turntable tray with mild detergent.
- Clean the outside surface of the microwave with mild detergent and a clean damp cloth. Dry with a clean soft cloth. To prevent damage to the operating parts of the oven, do not let water seep into any vents or openings.
- Wash the oven door window with very mild soap and water. Be sure to use a soft clean cloth to avoid scratching.
- If steam accumulates inside or outside the oven door, wipe with a soft cloth. Steam can accumulate
- when operating the oven in high humidity and in no way indicates microwave leakage.
- Never operate the oven without food in the oven cavity; this can damage the magnetron tube or
- glass tray.

107 RANGE HOOD FABER INSM21GR240

General Care

Cleaning Metal Grease Filters

The metal grease filters can be cleaned in hot detergent solution or washed in the dishwasher. They should be cleaned every 2 months use, or more frequently if use is particularly heavy.

- Remove the filter, pushing the lever towards the back of the unit and at the same time pulling downward.
- Wash the filter without bending it, leave it to dry thoroughly before replacing (if the surface of the filter changes color over time, this will have absolutely no effect on its efficiency).
- Replace, taking care to ensure that the handle faces forward.
- Cleaning in dishwasher may dull the finish of the metal grease filter.
- No water can be present in filters before installing back in hood.

Cleaning Exterior Surfaces

Please note, abrasives and scouring agents can scratch range hood finishes and should not be used to clean finished surfaces.

Stainless Steel Finish Cleaning Instructions: Clean exterior surfaces with a commercially available stainless steel cleaner.

Painted Gray Finish Cleaning Instructions: Clean exterior surfaces with hot soapy water.

Replacing Activated Charcoal Filter

The Activated Charcoal Filters are not washable and cannot be regenerated, and must be replaced approximately every 4 months of operation, or more frequently with heavy usage.

- Remove the grease filters.
- Remove the saturated carbon filter.
- Fit the new filter by hooking it into its seating.
- Replace the grease filters.

Caution: When used in recirculation mode, to Reduce the Risk of Fire and Shock use only conversion kit Model FILTER 4.

